

RFWRT Commissioning



Frost Button

Rx:

After powering the receiver, press the commissioning button

1: The LED lights will flash alternately.

Tx:



2: Press and hold “SET” & “SELECT” until display changes

3: Press Select 3 times (F1 will appear in screen)

4: Set any code from 0 - 255 with up or down arrow then
Press the Frost button (LED Lights on Rx Stop flashing)

5: Press Set Button

6: **The transmitter/receiver are now paired.**

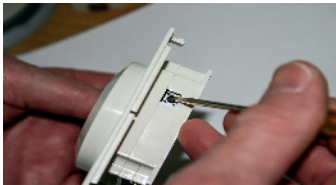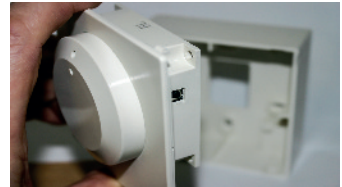

1: Press Button




Lights Flash



2: Press & hold SELECT & SET buttons



3: Press SELECT 3 times

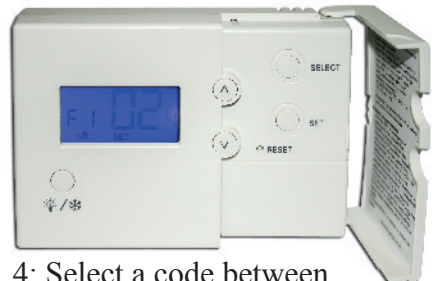

4: Select a code between 0 & 255 with up/down buttons then press the Frost button

5: Press the “SET” button to return to the default screen.